

NOTICE!



WARNING: If the terminal is severely jolted or dropped during shipment, the printer mechanism in the ICE 5500 or the ICE 5700 terminal may become dislodged from its normal operating position.

ICE 5500/5700


Printer Re-seat and Stylus Attachment Instructions

Checking the Printer Mechanism

The printer mechanism must be checked before operating the terminal. To begin:

1. Open the printer cover. See Figure 1.
2. Push the printer mechanism straight toward the inside of the terminal. Do not push down. Make sure the printer mechanism is seated behind the small black tab. See Figure 1.
3. Close the printer cover.

Figure 1

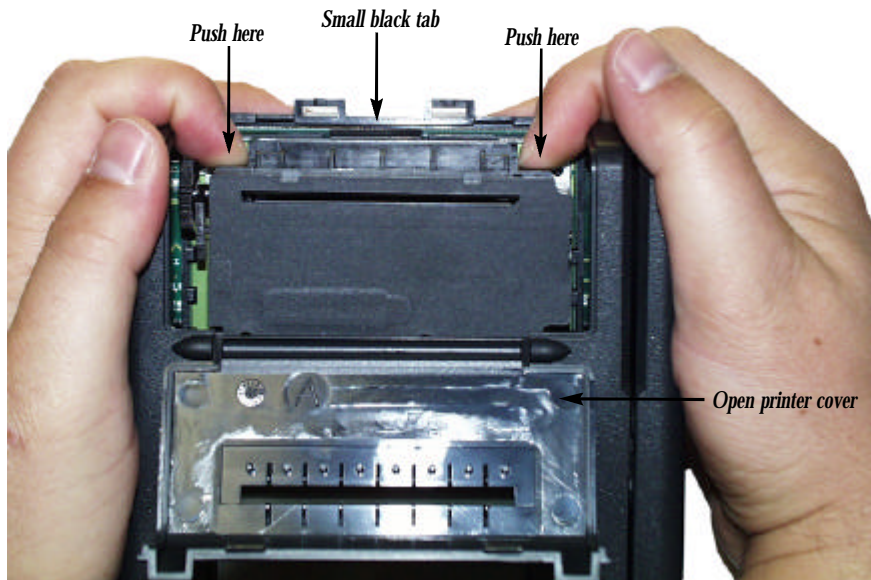


ATTENTION: Use the stylus! Do not use a pen on the screen. Pens and other sharp objects will scratch the screen display.

Attaching the Stylus to the ICE 5500/ICE 5700

The stylus must be attached to the ICE 5500/ICE 5700 before using the terminal. To begin:

1. Remove the paper tape from the stylus holder to expose the adhesive coating. See Figure 2.

Figure 2

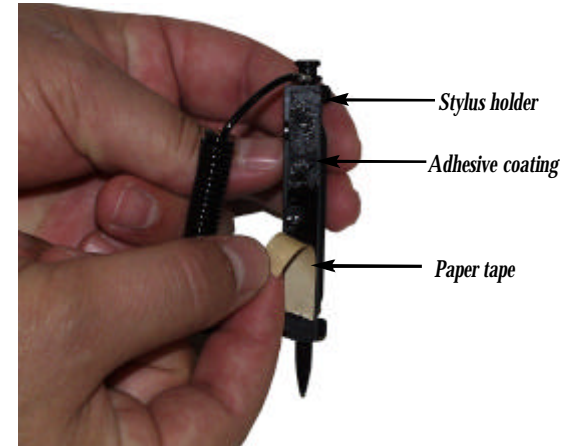

2. Attach the stylus holder by firmly pressing the stylus to the right side of the terminal. See Figure 3.
3. Use this stylus on the screen at all times to prevent damage and voiding of the manufacturer's warranty.

Figure 3



World Headquarters

2851 West Kathleen Road • Phoenix, AZ 85053
602.504.5000 • 877.HYPERCOM within USA • Fax: 602.504.5166
e-mail: info@hypercom.com • Web: www.hypercom.com